



STELRAD ELECTRIC FANTASIA DRY INSTALLATION INSTRUCTIONS

Health and Safety

Consult your employers manual handling risk assessment before manually handling any radiators. Many of Stelrad's products are more than 25Kg. Care should be taken, and assistance sought when lifting large, heavy and bulky loads to avoid potential injuries. Safety gloves are advisable for protection.

For your own safety please refrain from placing your hands – fingers between and down the back of the radiator to prevent possible injury.

Symbols used in the manual



IMPORTANT!

Danger for the safety of persons, pets and things.



IMPORTANT!

High temperatures. Risk of burns.



IMPORTANT!

Danger electric shock.



Tips for efficient operation.



IMPORTANT!

Danger of damage to the appliance.



DO NOT COVER THE APPLIANCE!

WARNING



CAUTION:

Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.



Children of less than 3 years should be kept away from the towel radiator unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children between 3 and 8 years old must not disconnect, regulate and clean the appliance or perform user maintenance. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



WARNING:

This appliance is designed to dry towels washed in water only. It must not be used for other purposes.

**Never install the appliance:**

- immediately below or in front of a power socket or a junction box (Fig. 5)
- in contact with the wall or floor
- near curtains, flammable or combustible materials or pressure vessels.



WARNING: Respect the distances shown in figures 4,5. To avoid all risks for young children, install the appliance with the lowest heating element at least 600 mm from the floor. (Fig. 4).



Install and use the appliance as described in these instructions only.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard. Never use the appliance if the electronic controls are damaged.



Make sure the fixed power line is fitted with a disconnecting switch allowing the appliance to be disconnected completely from the household mains, included the Pilot Wire, when present, in accordance with the wiring rules.

**WARNING:**

Never cover the control device in any way. (Fig. 6)



Attention: you may detect a smell. You are recommended to ventilate the room.

Disposal of this appliance and the fluid contained inside the towel warmer must be carried out in accordance with the legislation in force for the disposal and management of waste.

DISPOSAL

Make sure the power cable is disconnected from the power line before performing any operation. To remove the appliance, follow the procedure for fixing to the wall in reverse. Disposal of this appliance and the fluid contained inside the towel radiator must be carried out in accordance with the legislation in force for the disposal and management of waste.



Important information for correct disposal of the product in accordance with EC Directive 2012/19/EC. At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

GENERAL INFORMATION

Storage and maintenance:

Avoid storing the appliance in places at risk of freezing. Protect from frost.



Unpack the appliance carefully and rest it on the polystyrene corner pieces or a soft support to avoid damage.

The package contains:

- the appliance
- Remote control (if provided) with two batteries and container for wall mounting
- mounting kit
- instructions



Read all the instructions carefully before installation and use. Keep for future consultation.



Install and use the appliance as described in these instructions only.



These instructions do not cover all situations which might arise. Caution and common sense should be applied when installing, operating and servicing the appliance.



Modifying the characteristics of the appliance and removing any fixed component including the caps and/or removing or rotating the control device in any way are expressly prohibited (Fig. 2).

Make sure the appliance is complete and undamaged. If damaged, do not use the appliance, but contact your local dealer or a qualified professional.



The materials used for packaging can be recycled. You are therefore recommended to dispose of them in special differentiated waste collection containers.



WARRANTY

You are recommended to keep all parts of the packaging in case the appliance needs to be returned to the dealer. The appliance must arrive complete and undamaged in order to maintain the validity of the warranty.

The Manufacturer warranties customers all the rights specified in European Directive 1999/44/EC and the consumer rights recognised by national legislation.

The warranty specifically covers all non-conformities and production defects present at the moment of sale or becoming evident within two years from the date of purchase and gives the customer the right to free repair of the defective product or replacement should repair be impossible.

The above rights are invalidated in the following cases:

- defects caused by uses other than those specified in the instructions, which are an integral part of the sales contract;
- defects caused by accidental breakage, negligence or tampering.
- The warranty does not cover any defects due to misuse during handling, transportation or storage processes.

Operations involved in installation, connection to the household mains and maintenance described in these instructions are not covered by the warranty.

The Manufacturer declines all liability for damage or injury caused directly or indirectly to people, objects or pets as a result of the failure to apply these instructions, with particular reference to warnings regarding installation, start-up and use of the product.

To claim the above rights, the Customer must contact his/ her dealer and present a valid proof of purchase issued by the seller, complete with date of purchase.

POSITIONING AND INSTALLING



RECOMMENDATIONS IMPORTANT READ BEFORE INSTALLATION

- Do not install the unit directly below a socket.
- Do not install the unit in a damp room or near a water source.
- Do not use the appliance outdoors.
- Do not install the unit in an air current that could disrupt its regulation.
- Do not place the unit near a barrier limiting the airflow around it.
- Attach the heater vertically to the wall as described below.
- Choose screws and plugs suitable for the wall material and weight of the unit.



RECOMMENDATIONS FOR WALL MOUNTING

- Do not make any changes to the unit or its mounting bracket on the wall!
- Before installing the device, check the condition of the wall on which it will be fixed: the wall must be in good condition, it must not show any damage (cracks, sagging, humidity, ...).
- Do not drill holes near old holes, even when they are closed.
- It is imperative that you consult a building professional to use the anchoring system (screws, dowels, etc.) appropriate for the material that constitutes your wall, as well as the weight of the appliance.
- Observe the diameter of the fixing screws indicated in this manual.
- Do not modify the holes for securing the unit or its mounting bracket to the wall.
- Drill the wall with a drill of the appropriate size for the anchoring system. Remove debris and dust.
- Regularly check the mounting points of the device on the wall. Tighten them if necessary.



WALL MOUNTING



- Place the towel rail face down on a flat surface, and loosely assemble each fixing point into the nuts located on the reverse of the towel rail using the spacer bar and bolt as shown in (Fig. 8).
- Tighten each fixing and then offer up the towel rail to the wall and mark off the fixing holes for the holes on each fixing point, taking care to make the rail squarely aligned on the wall.
- Drill and plug the wall suitable for the supplied plugs/screws.
- Screws each fixing point to the wall (Fig. 8).
- Fit the rail with the assembled spacer bars onto the wall-mounted fixing points (Fig. 8). Tighten the spacer bar to the wall fixing using the hexagonal screw with the tool provided(Fig. 8).

INSTALLATION IN THE BATHROOM



WARNING:

This product shall be used in volume 2 and out of volume only according to the national wiring rules (For France NF C 15-100)(Fig. 3). Note: The drawing(Fig. 3) is for reference only . We suggest that you contact a professional electrician for assistance.

Voltage: 230 V - 50 Hz (GMDOEF0L); 220-240V-50/60Hz (GMDOF50L, GMDOFF0L)

Insulation class: II 

Protection class: IP24

Power (W)	500	750
Rated current (A)	2,2	3,3

Table 1

ELECTRICAL CONNECTIONS



WARNING:

To be installed by a specialised engineer in accordance with the applicable standards in the country concerned. When the appliance is installed, make sure the power is off. The appliance requires a 230V~ 50Hz (for GMDOE50L and GMDOEF0L) or 220-240V~ 50/60Hz (for GMDOF50L and GMDOFF0L) power supply. Make sure the power line is appropriate.



The installation must be carried out in the rules of the art and meet the standards in force in the country (NF C 15-100 in France).



The unit must be connected to a standard wall box placed at least 60 cm from the floor. The appliance must not be connected to an outlet with a power plug. The appliance must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.



The appliance must not be connected to the earth wire (yellow and green wire).



In the absence of pilot wire, insulate the bare end of the black wire to prevent electrical contact with the other wires or ground.



Make sure the power cable cannot in any way come into contact with the surface of the appliance.


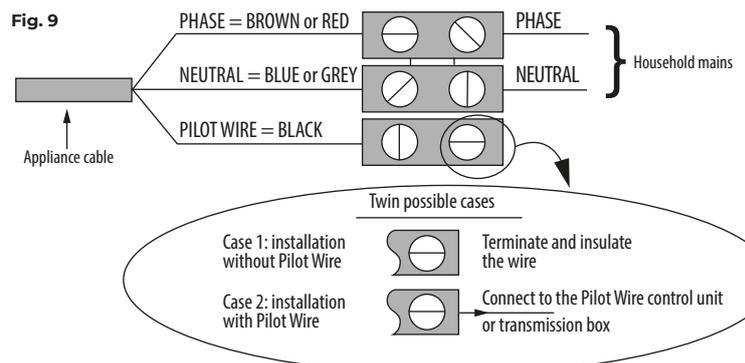




FIG. 3

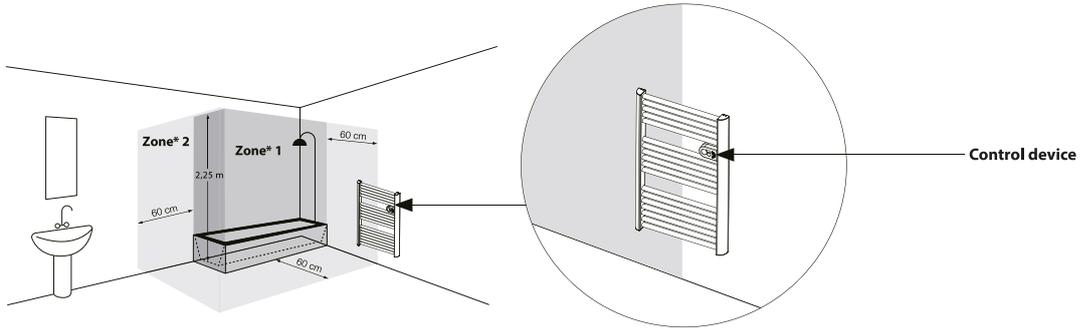

* Zone

FIG. 4

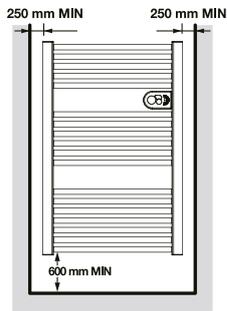


FIG. 5

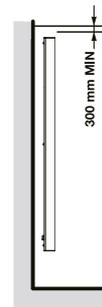


FIG. 6

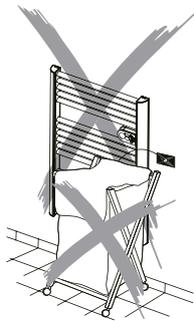


FIG. 7



FIG. 8

