

A striking, modern play on the traditional ladder rail, featuring narrow tubular rails that grace either a bathroom or kitchen perfectly. Available in either **polished or brushed stainless steel**, to give you a shiny or matt finish, this new offering provides a crisp new approach to an age-old solution.



STAINLESS STEEL TOWEL RAIL

Stainless Steel radiator

Boutique Series

50 Δt

(75/65/20°C)

POLISHED STEEL

Height mm	Length mm	Stelrad UIN	Heat output		Price excl VAT	Price incl VAT
			Watts	Btu/hr		
750	500	741001	190	648	£317.73	£381.28
1200	500	741002	299	1,20	£395.28	£474.34
	600	741003	340	1160	£429.05	£514.86
1500	500	741004	370	1262	£462.82	£555.38

BRUSHED STEEL


Height mm	Length mm	Stelrad UIN	Heat output		Price excl VAT	Price incl VAT
			Watts	Btu/hr		
750	500	742001	190	648	£293.96	£352.75
1200	500	742002	299	1020	£361.51	£433.81
	600	742003	340	1160	£395.28	£474.34
1500	500	742004	370	1262	£429.05	£514.87

Δt 50 is the UK's industry standard for heating outputs, which has an operating temperature of 75/65/20°C. If you have a low temperature heat source you may wish to consider Δt 40 or Δt 30 output (see your installer or system designer or download from www.stelrad.com).

For EN442 data, technical and installation information please visit our website: www.stelrad.com and search product downloads.



FINISHES

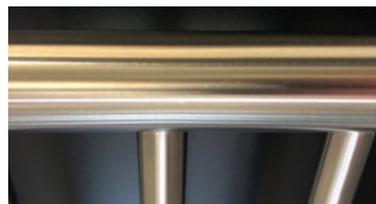

Brushed



Polished



STAINLESS STEEL TOWEL RAIL


Stainless Steel radiator

Boutique Series

WALL MOUNTING INFORMATION



All dimensions in mm.

TOOLS REQUIRED FOR INSTALLATION

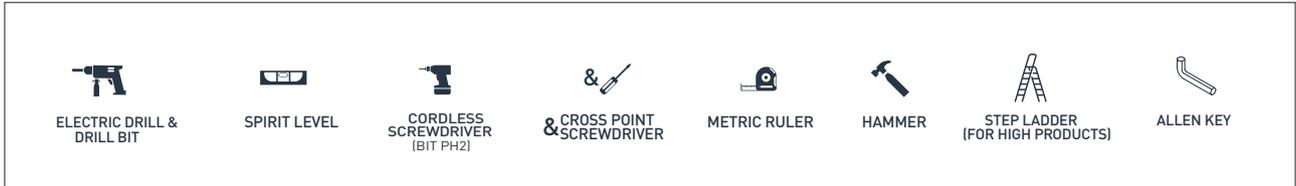

INSTALLATION INSTRUCTIONS

Place your radiator at least 12,5 cm above the floor.
 Provide insulation by wrapping PTFE tape on the treads before installing the valves.
 Apply silicone seal fluid to all treaded parts containing o-rings.
 Connect your radiator to the utilities after following all the installation steps in the manual.
 After connecting to the utilities, do not forget to discharge the trapped air inside the radiator.

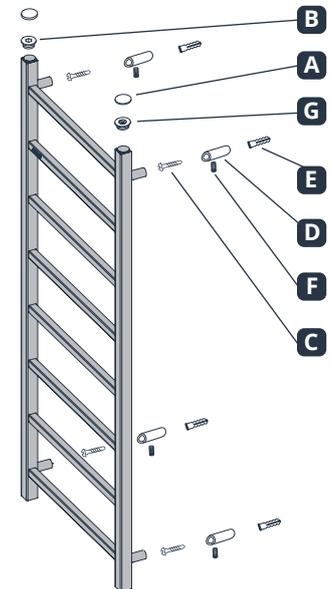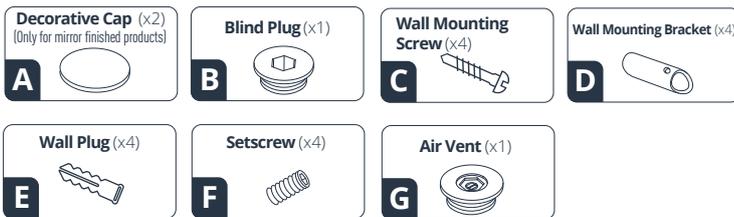

INSTALLATION INSTRUCTIONS FOR THE STAINLESS STEEL TOWEL RAIL

1

1- Adjust the height of your radiator by using a metric ruler.
 2- Set the location of your radiator as desired, align with the ground by using a spirit level and mark the position of the wall mounting brackets.

2

1- Drill holes (Ø 10 mm) into the spots you have marked.
 2- Nail the wall plugs (E) in the holes by using a hammer.
 3- Screw the wall mounting brackets all the way to the holes with the help of a screwdriver.

3

1- Place your radiator into the wall mounting brackets (D).
 2- Insert the setscrews (F) into the slots on the mounting brackets (D), adjust the distance between the wall and your radiator then tighten the setscrews by using an Allen key (M3).