


### How to install a baffle in a column radiator

Follow the following instructions to install the baffle into your column radiator:

1. Determine the inlet / flow connection on the radiator
2. Insert the baffle into the radiator inlet / flow connection at the bottom connection only
3. Secure hand tight, followed by securing with a suitably sized spanner/Grips
4. Do not exceed 40 Nm - overtightening can damage the threads
5. Fit the radiator tailpiece, the radiator valve, and supply pipework
6. Fill the system and check for leaks.

- ⊖ - Blank
- s - Vent
- ▶ - Inlet
- ▷ - Outlet

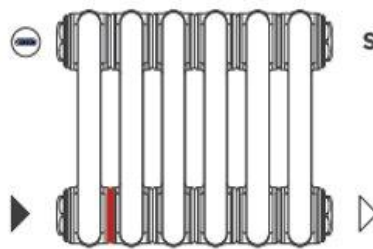

The red line on the diagram indicates where the baffle is located, this can either be at the bottom left or bottom right.

**Note:**

- Install on the dedicated inlet / flow connection side only
- Only install one baffle per radiator
- Only use the baffle if piping BBOE – Bottom - Bottom - Opposite - End
- Without the baffle, the radiator may not achieve the stated outputs shown in literature.