
## STAINLESS STEEL INSTALLATION GUIDE

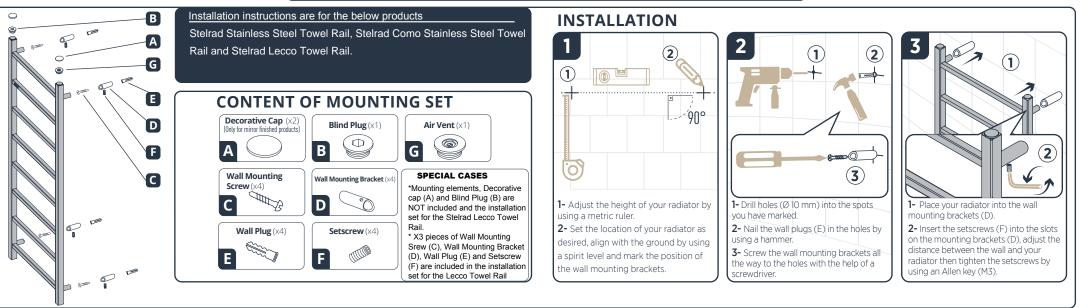











• Place your radiator at least 12.5 cm above the floor.

- Provide insulation by wrapping PTFE tape on the treads before installing the valves.
  Apply silicone seal fluid to all treaded parts containing o-rings.
- Apply success seal rule to all treaded parts containing o-rings.
  Connect your radiator to the utilities after following all the installation steps in the manual.
  - After connecting to the utilities, do not forget to discharge the trapped air inside the radiator.

www.stelrad.com

